




**Marley**  
Engineered Products

# MCM1503 Utility Heater

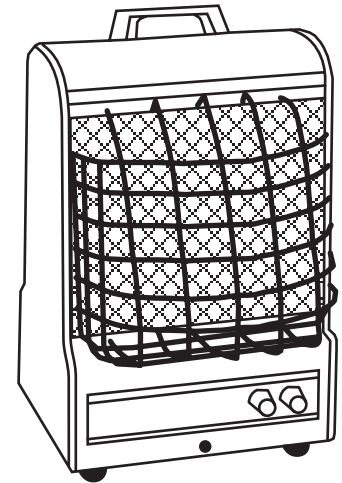

## IMPORTANT INSTRUCTIONS



### WARNING

**TO REDUCE THE RISK OF PERSONAL INJURY OR ELECTRIC SHOCK:**

*When using electrical appliances, basic precautions should always be followed to reduce the risk of fire, electrical shock, and personal injury.*

1. Read all instructions before using this heater.
2. This heater is hot when in use. To avoid burns, do not let bare skin touch hot surfaces. Always use handle when moving heater. Keep combustibles such as electrical cords, furniture, pillows, bedding, papers, clothes, and curtains at least 3 feet (.9 m) from front of heater and at least 1 foot (.3 m) away from sides and rear.
3. Extreme caution is necessary when any heater is used by or near children or invalids and whenever the heater is left operating and unattended.
4. Always unplug heater when not in use.
5. Do not operate any heater with a damaged cord or plug, if heater malfunctions, or has been dropped or damaged in any matter. Heater must be repaired by qualified electrician.
6. Do not use outdoors.
7. This heater is not intended for use in wet or damp locations. Never locate heater where it may fall into bathtub or other water container.
8. Do not run cord under carpeting. Do not cover cord with throw rugs, runner or the like. Arrange cord away from traffic area and where it will not be tripped over.
9. To disconnect heater, turn selector knob to the "OFF" position, then remove plug from outlet.
10. Connect to properly grounded outlets only.
11. Do not insert or allow foreign objects to enter any ventilation or exhaust openings as this may cause electric shock or fire, or damage the heater.
12. To prevent a possible fire, do not block air intakes or exhaust in any manner. Do not use on soft surfaces, like a bed, where openings may become blocked.
13. A heater has hot and arcing or sparking parts inside. Do not use it in area where gasoline, paint, or other flammable liquids are used or stored.
14. Use heater only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or personal injury.
15. Avoid the use of an extension cord because the extension cord may overheat and cause a risk of fire. However, if you have to use an extension cord, the cord must be a 3 wire grounded type having at least No. 14 AWG and rated not less than 1875 watts.
16. This heater is provided with a manual-reset over-temperature control that will turn heater off if over heating occurs. Before resetting "RESET" button, make sure reason for over heating is corrected and heater is checked to make sure it is not damaged. Do not continue to use heater if heater repeatedly cycles off on this safety device.
17. Do not remove grille guard or allow heater to be operated without grille guard in place.
18. For floor use only.

**SAVE THESE INSTRUCTIONS**


## FEATURES

- **Tip-Over Switch** - shuts heater off automatically if unit tips over.
- **Pilot Light** - glows when heater is plugged in.
- **Manual Reset Over-Temperature Safety Cutoff** - automatically turns heater off if overheating occurs.

### Model MCM1503

This heater is provided with a grounded (3 blade) plug for use on 110-120 volts AC.

**CAUTION:** The grounded plug must be used with a grounded outlet. Do not use an adapter in a 2-slot wall outlet unless the ground lug of the adapter is properly connected to a known building ground. Failure to use heater with properly grounded outlet or adapter could result in an electric shock hazard. The adapter should not be used if a 3 slot grounded receptacle is available.

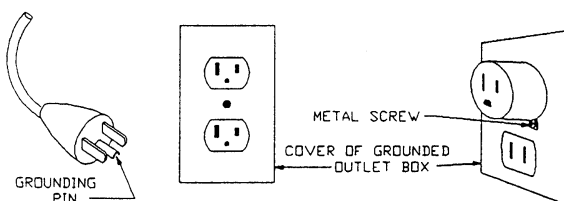

## TO OPERATE

1. Plug the heater power cord directly into a standard grounded 110-120 volt AC outlet. Always operate the heater in the upright position with the rubber feet on the floor.

**CAUTION:** Be sure plug fits tightly into outlet. A loose fit will cause overheating and damage to the plug. Plug may feel warm during normal usage.

2. Rotate heat selection knob to "LOW" (600W), "MED" (900W) or HIGH (1500W) setting.
3. Rotate the "THERMOSTAT" knob clockwise (right) until the knob stops. The heater should begin heating. At "LOW" (600W) the fan will not operate. At "MED"

(900W) and "HIGH" (1500W) settings, the fan should start to blow warm air.

4. Allow the heater to operate until the room temperature reaches the desired level, then slowly rotate the "THERMOSTAT" knob counter-clockwise (left) until the heater cycles off. At this setting, the heater will cycle on and off automatically to maintain this comfort level.

**NOTE:** Do not force knob beyond its normal stop position. It may be necessary to make minor adjustments to the thermostat to maintain the desired comfort level. Clockwise movement will increase the room temperature. Counter-clockwise movement will decrease room temperature.

5. To conserve energy, the heater may be operated at a lower wattage by placing the heat selection knob at the "LOW" (600W) or MED (900W) settings.
6. When heater is not needed, rotate control knob to the "OFF" position, remove the plug from outlet, and move heater to safe place for storage.

## CLEANING & CARE

Your heater is designed for trouble-free operation with little maintenance. However, routine cleaning is recommended as follows:

1. Before attempting to clean heater, turn heater to "OFF" position and remove plug from outlet.
2. Using damp cloth, wipe dust and dirt from heater to cabinet. Do not use waxes as they may discolor.
3. When heater is not to be used for an extended time, turn to "OFF" position, unplug from outlet and place heater in safe place, such as a box, to prevent possible damage.

## TO RESET OVER-TEMPERATURE CONTROL

This heater is equipped with a built-in over-temperature safety switch that will cycle the heater off if the heater overheats. After heater is allowed to cool and the condition that caused the overheating is corrected, using a small straight object, such as a pencil, push in button located inside small hole on side of heater marked "RESET".

## LIMITED WARRANTY

All products manufactured by Marley Engineered Products are warranted against defects in workmanship and materials for two years from date of purchase. This warranty does not apply to damage from accident, misuse, or alteration; nor where the connected voltage is more than 5% above the nameplate voltage; not to equipment improperly installed or wired or maintained in violation of the product's installation instructions. All claims for warranty work must be accompanied by proof of the date of installation.

The customer shall be responsible for all costs incurred in the removal or reinstallation of products, including labor costs, and shipping costs incurred to return products to Marley Engineered Products Service Center. Within the limitations of this warranty, inoperative units should be returned to the nearest Marley authorized service center or the Marley Engineered Products Service Center, and we will repair or replace, at our option, at no charge to you with return freight paid by Marley.

It is agreed that such repair or replacement is the exclusive remedy available from Marley Engineered Products.

THE ABOVE WARRANTIES ARE IN LIEU OF ALL OTHER WARRANTIES EXPRESSED OR IMPLIED, AND ALL IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE WHICH EXCEED THE AFORESAID EXPRESSED WARRANTIES ARE HEREBY DISCLAIMED AND EXCLUDED FROM THIS AGREEMENT. MARLEY ENGINEERED PRODUCTS SHALL NOT BE LIABLE FOR CONSEQUENTIAL DAMAGES ARISING WITH RESPECT TO THE PRODUCT, WHETHER BASED UPON NEGLIGENCE, TORT, STRICT LIABILITY, OR CONTRACT.

Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above exclusion or limitation may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

For the address of your nearest authorized service center, contact Marley Engineered Products in Bennettsville, SC, at 1-800-642-4328. Merchandise returned to the factory must be accompanied by a return authorization and service identification tag, both available from Marley Engineered Products. When requesting return authorization, include all catalog numbers shown on the products.

NEED TECHNICAL OR WARRANTY ASSISTANCE?  
PLEASE CALL TOLL-FREE 1-800-642-HEAT.

5200-2455-001

ECR 36008  
12/03